



APARTMENT DRYER INSTRUCTIONS

PLEASE TURN ON THE EXHAUST FAN DURING USE OF WASHER AND DRYER.

The fan switch is on the wall to one side of the machines.

- 1. LOAD** clothes in the dryer.
- 2. CHECK LINT FILTER INSIDE** the door to make sure it is clean.
- 3. CLOSE DOOR.**
- 4. SELECT YOUR OPTION** – PERMANENT PRESS OR REGULAR/COTTON.
- 5. PUSH THE START/STOP BUTTON** to activate.
- 6. AFTER CYCLE** has completed, please clean the lint filter.
- 7. IMPORTANT** – When laundry is finished, please turn dials on both the washer and dryer to the “OFF” position.