



APARTMENT WASHER INSTRUCTIONS

PLEASE TURN ON THE EXHAUST FAN DURING USE OF WASHER AND DRYER.

The fan switch is on the wall to one side of the machines.

IMPORTANT – LEAVE WASHER DOOR OPEN SLIGHTLY AFTER USE TO PREVENT MILDEW FROM DEVELOPING.

1. DETERGENT

The machine requires "**he**" (**High Efficiency**) laundry soap to prevent high sudsing and damage to the machine. Here are some common brands of he laundry soap: "**Tide he**", "**All he**", or "**Woolite he**".

DO NOT USE BLEACH.

DO NOT USE POWDERED DETERGENTS.

TIDE PODS "he" are provided for your use. Place one (1) Tide pod inside the washer drum, then add in your clothes on top of the Tide pod, and close the door.

LIQUID "he" DETERGENT. If you use your own liquid "he" detergent:

- pull out the detergent dispenser on the left side of the machine (Bosch name on it),
- add about 2 tbsps. of liquid, or the amount specified on the bottle, to the **dispenser on the far left marked "II"**.

2. FABRIC SOFTENER. If you use liquid fabric softener, add 1 capful to the **middle compartment**.

3. LOAD CLOTHES in washer but not more than 1/2 full. CLOSE DOOR TIGHTLY.

4. SELECT SETTINGS. PERMANENT PRESS --OR-- REGULAR COTTON

Facing machine and using dial on the right, select your option.

5. START WASHER.

Make sure that the washer door is closed and, if you have used the dispenser, make sure that it has been shut. Push "**START/PAUSE**" button on the right.

DO NOT OPEN DOOR DURING THE CYCLE.

Push **PAUSE** if it is necessary to stop before the cycle is done.

6. After cycle is complete, remove clothes, and, TO PREVENT MOLD:

WIPE EXCESS MOISTURE THAT HAS COLLECTED IN THE PLASTIC COLAR AROUND THE OPENING

LEAVE DOOR SLIGHTLY OPEN TO ALLOW THE MACHINE TO AIR DRY

Right side compartment marked –"I" releases the drawer for cleaning purposes by pulling blue lever.