Rti Universal Remote Use Instructions



WATCH TV

- Point remote at cable box and tv (stand a few feet from the TV area)
- Press Cable button (A) to turn on the TV
- Make sure cable box light is on. Press On button (B) to turn on.
- Power button (G) is used only to turn off the TV
- Important Return remote to charging base when not in use.

UNIVERSAL REMOTE OPERATES

- TV
- DVR Digital Video Recorder (to record programs)
- DVD BLURAY Digital video disc player (to watch your dvd)
- MY MUSIC connect to your Bluetooth from your mobile device
- HDMI connect your personal equipment (games, computer, camcorder)

To select an activity (TV/Cable, BluRay, My Music), point the remote at the TV area for a few seconds and press and release the activity selection button. There is a short delay while the activity begins.

ACTIVITY SELECTION BUTTONS

(A). CABLE BUTTON - WATCH TV.

Press "CABLE" button TO WATCH TV. There is a short delay while the TV powers on. If no picture, make sure the cable box is on.

- 1. Channel up/down and Volume up/down.
- 2. Guide will provide cable/channel guide.

(B). ON – CABLE BOX. Cable box will be on. If it is not on, PRESS On button (B) on the Rti remote or go to the box and press on.

RECORD PROGRAMS TO WATCH LATER.

Press (C) "RECORD" to record your program. Press (D) "LIST" to play your program.

(E). BLURAY BUTTON.

(WATCH YOUR MOVIE, NETFLIX, AND OTHER APPS). Insert disc and Press "BLURAY" to watch/listen.

(F). MY MUSIC BUTTON.

See "Guide" for music channels available through ty/cable.

Press "MY MUSIC" to link your Bluetooth from your mobile device. Go to your mobile device "settings", turn on your "Bluetooth" and look for Yamaha 207 and connect. You can then play music stored on your phone (Pandora or other music you can access from your mobile device).

HDMI OUTLET.

Use the HDMI inlet attached to the TV stand/base, to connect your personal equipment like a game/play station, camcorder, computer, etc. **Press "VIDEO" for your device to be seen on TV.**